

## Technical card

Product category


Dividers

Collection

Diaframmi

Model

Retina

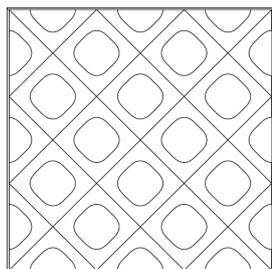

### Description

modular elements for wall dividers

Taric code

marble: 6802 9100 90

Design model protected by patent and ADI registered


Available standard sizes

cm 121,6x121,6x15,5

47 7/8" x 47 7/8" x 6 7/64"

Tolerance:  $\pm 0,5$  mm for width and height.

The nominal thickness is indicative and determined by the 3D carving depth, thus it may vary depending on the point where it is measured.

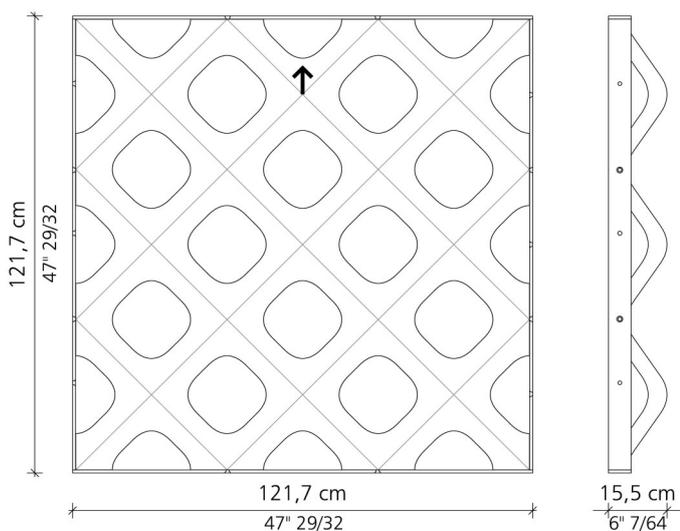

Lithos Design srl

Via del Motto 25, 36070 - San Pietro Mussolino (VI) Italia


tel +39.0444.687301 - info@lithosdesign.com - www.lithosdesign.com

P.Iva 03395860244 - REA VI 322073

## Technical information

materials	typology	material's weight per volume unit	water absorption	compression breaking load	Retina's weight
bardiglio nuvolato	crystalline marble	2687 Kg/m <sup>3</sup>	0,15%	1387 Kg/cm <sup>2</sup>	77 Kg/m <sup>2</sup>
carrara ghiaccio	crystalline marble	2550 Kg/m <sup>3</sup>	0,93%	1309 Kg/cm <sup>2</sup>	75 Kg/m <sup>2</sup>
verde imperiale	calcareous marble	2672 Kg/m <sup>3</sup>	—	1753 Kg/cm <sup>2</sup>	79 Kg/m <sup>2</sup>

## Laying direction

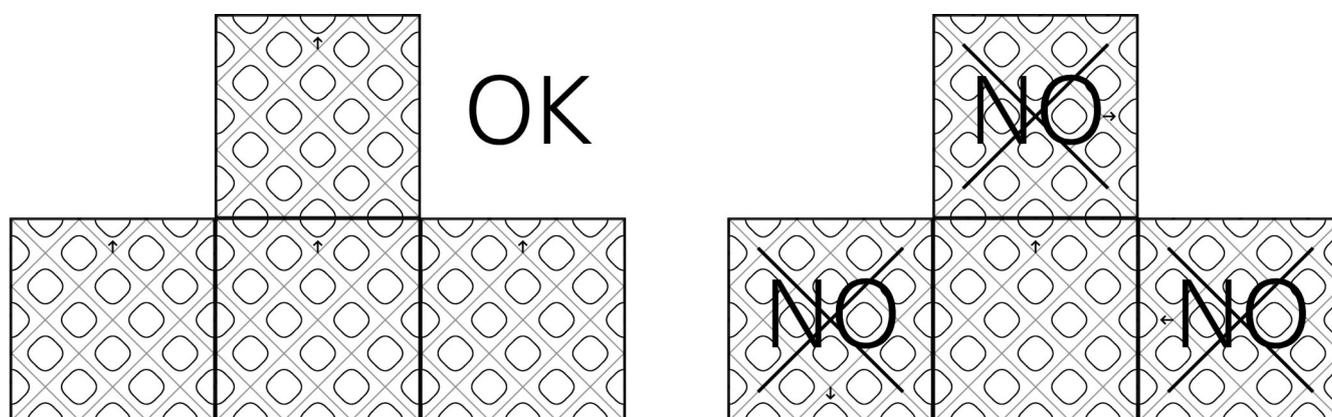

## Laying advices

The laying of all materials, and of stone in particular, has to be entrusted to expert, qualified and equipped personnel. 'Diaframmi' were designed to be installed by simple module combination. The product is composed of marble modules 120x15,5x120h cm that are framed by stainless steel AISI 304 with a satin finish. The product is installed by means of lateral metal bars that have to be installed on site and the marble modules provided by Lithos Design are secured to the metal bars by means of screws. The lateral metal bars can be provided by Lithos Design or can be fabricated on site.

## Protective treatments

All the tiles are pretreated before delivery with a sealer, according to the following chart:

materials	pretreatment
bardiglio nuvolato	Bellinzoni Antik
carrara ghiaccio	Bellinzoni Antik
verde imperiale	Bellinzoni Antik

#### Maintenance

The material has to be kept with an ordinary cleaning. Aim of the ordinary maintenance is to remove the general dirt, such as particles of dust and marks. The maintenance must be carried out regularly and it is essential to use the correct procedures and products, so as not to damage the protection ensured by the initial treatment. The interventions must be graduated according to needs.

Ordinary cleaning: use 'Fila Cleaner' diluted detergent (2 or 3 caps of product in 5 litres of water are enough), rinsing is not necessary.

Protection renewal: when the surface needs a treatment renewal, apply a uniform coat of 'Fila Fob'.

For any further information on Bellinzoni products please visit Bellinzoni website [www.bellinzoni.com](http://www.bellinzoni.com) or contact Bellinzoni Srl.

For any further information on Kerakoll products, please visit Kerakoll website [www.kerakoll.com](http://www.kerakoll.com) or contact Kerakoll Spa.